


AK INDUSTRIES SUMP PIT INSTALLATION INSTRUCTIONS

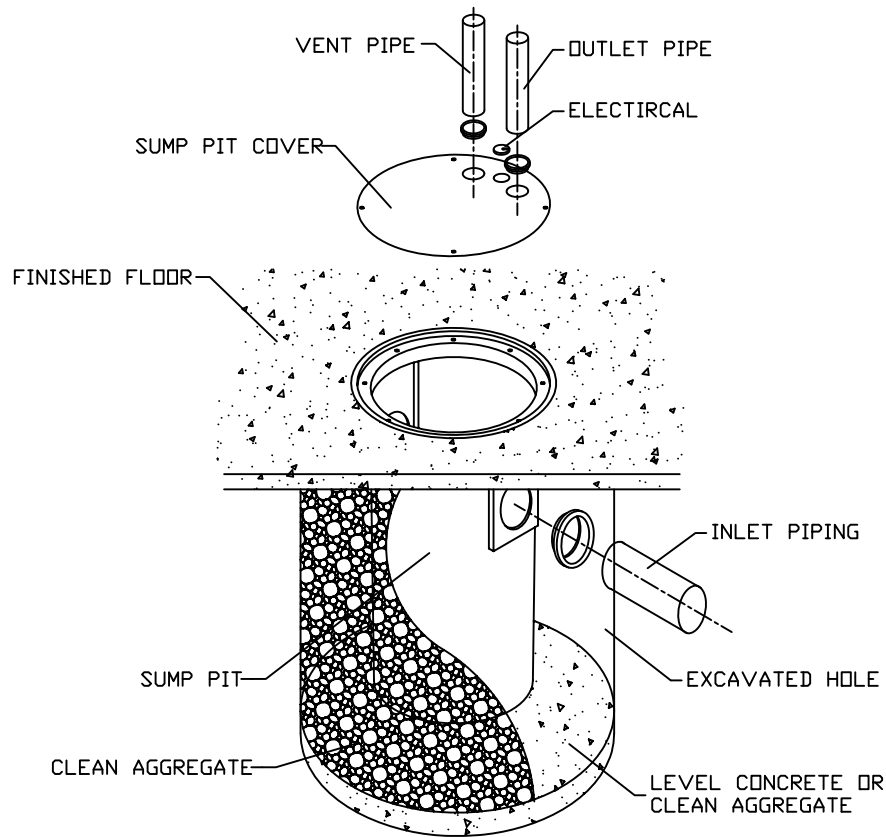

- 1) INSPECT ALL MATERIALS & COMPONENTS TO BE CERTAIN NOTHING WAS DAMAGED IN TRANSIT.
- 2) EXCAVATE A HOLE LARGE ENOUGH FOR THE BASIN AND AT LEAST 4"-6" OF CLEAN AGGREGATE.
- 3) PREPARE THE BOTTOM OF THE HOLE WITH 6" OF CLEAN AGGREGATE OR A LEVEL CONCRETE PAD.
- 4) INSTALL THE BASIN IN THE HOLE MAKING CERTAIN IT IS LEVEL AND MEETS GRADE REQUIREMENTS.
- 5) CONNECT ANY UNDERGROUND PIPING REQUIRED THEN CAREFULLY BACKFILL WITH NATURALLY ROUNDED AGGREGATE.
- 6) INSTALL PUMP AND ABOVE GROUND PIPING BEING CAREFUL TO FOLLOW PUMP MANUFACTURER'S INSTRUCTIONS.
- 7) ATTACH COVER TO BASIN AND COMPLETE INSTALLATION BY ATTACHING ELECTRICAL, VENTS, CHECK VALVES, ETC.